



 
CINEMA

— Smart TV —


Product Manual



**Evervue Standard
TV Remote**
(RMS50)



Zepp Remote Pro
(RM-ZEPP-PRO)

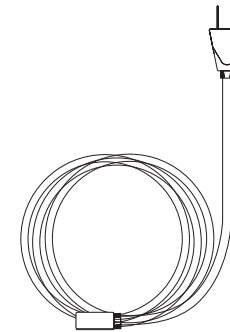 


Power Cable
(3 meters)



Cinema TV

 Upon receiving your order, open the crate and inspect the content. Damages must be reported within 24 hours.

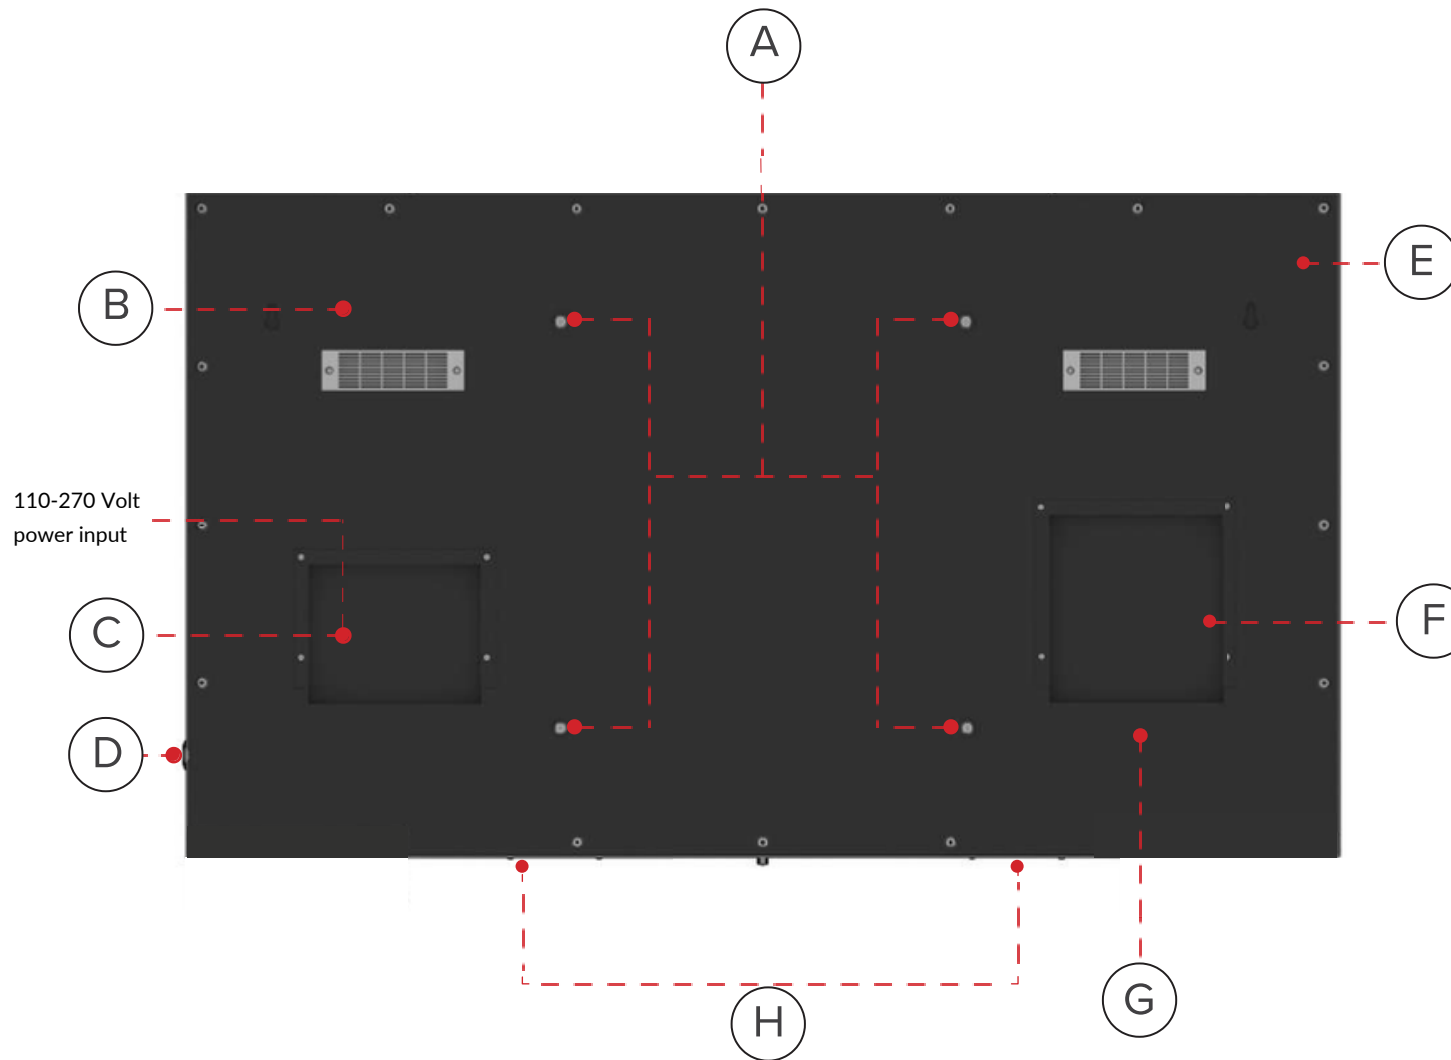

PARTS _____

- A** VESA Compatible for Mounts/Brackets
- B** Warm Air Outlet for Cooling System
- C** Power, HDMI, USB, Audio Compartment
- D** Stainless Steel, Easy Access On/Off Button
- E** Direct Wall Mount Openings
- F** Set Top Box Compartment
- G** Kensington Lock Opening
- H** Cool Air Inlet

 
PARTS _____




Extra thin Bezel



Wide Angle Infrared Receiver

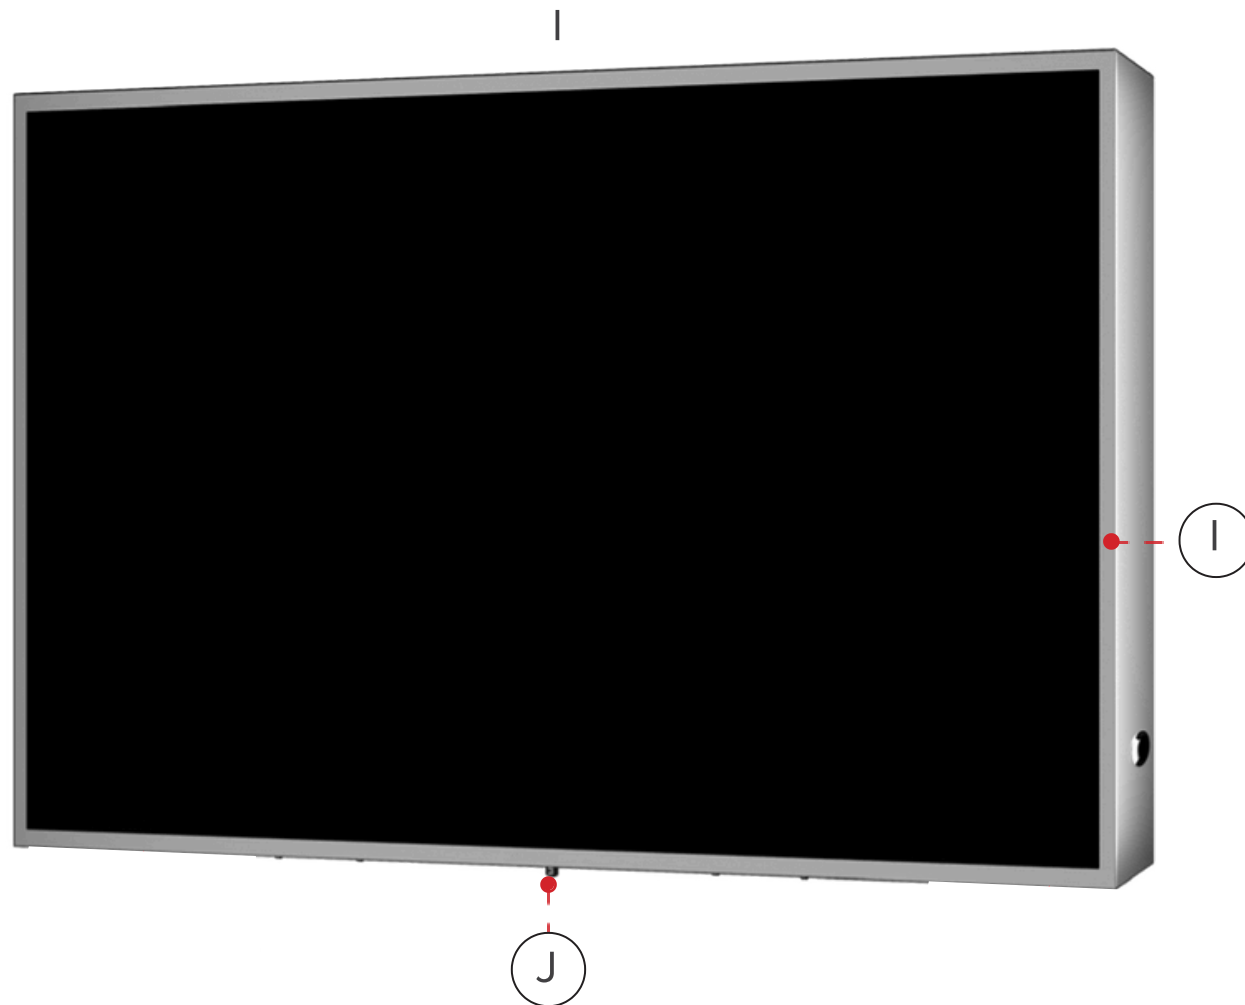

 2.4G & BT5.5 DUAL MODE WIRELESS VOICE AIR MOUSE

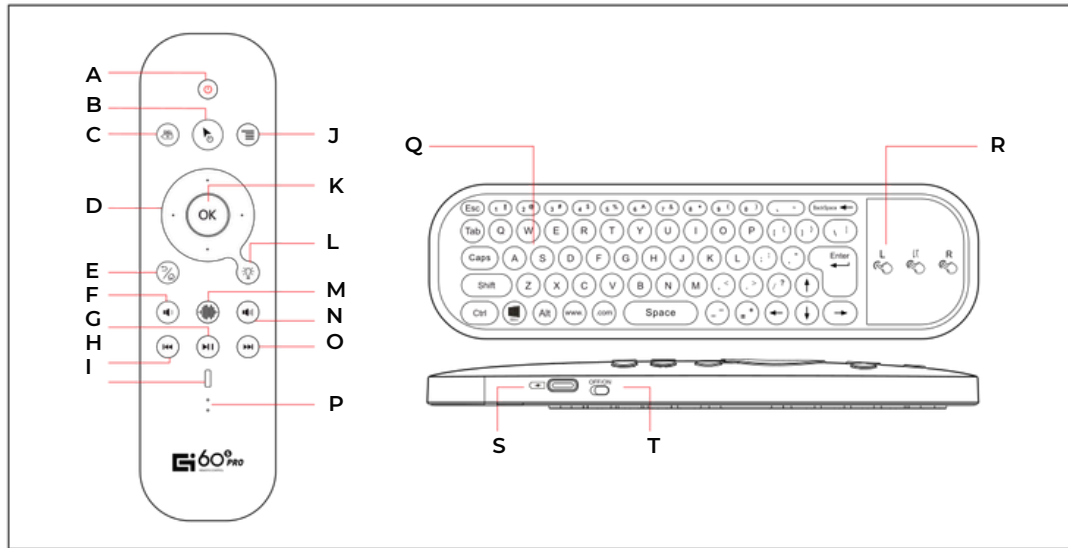

1 PRODUCT DIAGRAM

This is a wireless fidelity voice input air mouse with built-in gyroscope and gravity acceleration sensor; It can perform the functions of a traditional remote control, computer mouse, and gaming motion controller on android platform.

Plug and play micro receiver is compatible with personal computer, projector, TV box, Home theater, Personal Computer, etc. Holding air mouse and rotating your wrist is converted into a movement of a cursor across the screen and it allows you to control your computer; projector and other entertainment equipment from a distance.

Ergonomics of air mouse will replace stationary computer mouse and infrared button remote control giving you convenience to manage your computer and television set from a position which is most comfortable for you.

- | | |
|--|---|
| A -Power IR Learning key | K -Enter / Mouse Left |
| B -Mouse ON/OFF | L -Long press to turn ON/OFF the backlit |
| C -Backspace | M -Open Google Voice Assistant |
| D -Navigation keys (Up/Down/Left/Right) | N -Volume up (+) |
| E -Home return / Mouse right | O -Next |
| F -Volume down (-) | P -Mic |
| G -Play / Pause | Q -Full keyboard |
| H -Previous | R -Touch panel |
| I -Indicator | S -Charging Interface |
| J - Menu | T - ON/OFF |

2 PRODUCT FEATURES

- Laser engraving with backlit
- Dual Mode: 2.4G & BT5.0
- High Quality voice input
- Built-in 6-axis gyroscope
- 6 IR Learning keys
- Fully QWERTY mini keyboard on the backside
- Built-in 320mAh rechargeable lithium battery

3 PRODUCT SPECIFICATION

Product Name: G60S PRO

Transmission Method: 2.4G RF wireless & BLE 5.0

Sensor: 6-axis Gyroscope

Number of keys: 80 keys

Transmission Distance: 8 - 10m

Working Current: <5ma

Quiescent Current: <15ua

Product Material: ABS Plastic and silicone

Product Size: 178 * 50 * 16mm

Product Weight: 90g

	ICON	FUNCTION
Support IR Learning Keys		Power
		Del
		Menu
		Previous
		Play/Pause
		Next

NOTE: Upon completion of learning IR code the original code values are replaced with new codes; Press "OK" and "Del" buttons for three seconds to restore the factory settings.

4 HOW TO USE THE IR PROGRAMMING

The operation steps of infrared programming are as follows:

(Take learning the power button on the infrared remote control as an example)

1. Press and hold the [power] button of this product for 3 seconds. When the red indicator light flashes slowly, prompt to enter the IR programming mode.
2. Position the product and your TV remote head-to-head on a flat surface with 1 inch apart, press the [power] button of your IR remote control, then the indicator light will go out flashing, indicating that the infrared programming is completed.

5 HOW TO CHANGE THE CURSOR SPEED

Press hold [OK] button and then [Speaker Icon], You will get a slower speed successfully when the click LED light changes from blink to solid. Press hold [OK] button and [Speaker Icon], You will get a faster speed successfully when the then click LED light changes from blink to solid.

6 BACKLIGHT FUNCTION

Press and hold [Light Icon] for 2 seconds to turn the backlight ON/OFF; The duration of backlight after activation is 5 seconds, and it needs to be activated again after 5 seconds. Press any key to activate the backlight.

7 VOICE FUNCTION

 
To use the voice function, Press and hold [Voice Switch Icon] Voice Switch to turn on voice channel. Release [Voice Switch Icon] to turn off voice channel.

If the microphone button can not wake up Google Voice Assistant, you can try the following steps:



Permission is required:
To keep going, The Google app needs permission to access some thin on your device.

Allow Google to record audio?
☐ DENY ☒ ALLOW

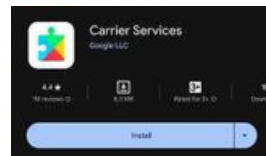

Install Google Play services / Carrier services

Update App Version:



Finally, You can use your Google Voice Assistant.

8 ABOUT VOICE SEARCH

Please refer to the steps in this picture to install [Google LLC] from the [Google play store]. If the installation failsto start normally, please continue to install [Google play services]. When starting [Google assistant], please set the device to allow Google to record audio and allow app permissions.

9 HOW TO USE

2.4G MODE

For initial use, plug a USB receiver into the USB port of device and wait for 20-60 seconds to install driver of USB receiver. Move the mouse, The mouse cursor can move on the screen means that the pairing is successful.

If it is unsuccessful, press and hold [OK] and [BACK] buttons. LED light begin to flash. Pairing is successful when LED light stop flashing.

BT 5.0 MODE


1. Before using this device, first you must turn on the BT function of the main device.
2. Then long press "OK" + "Return" keys, when the LED turns to flash quickly, the product enters the pre pairing.
3. Click "add search new devices" on the main device to find this air remote's name (Example: G60S PRO). Click the name can to connecting.
4. After the product is successfully connected, the direction of the mouse pointer can be controlled by waving in the air.
5. If the connection is not successful, please perform the operation steps of item 2-4 again.
6. Reconnet efficiency description: The normal reconnet time of this product is 3-5 seconds after it is normally paired with the main equipment.
7. This product can only remember the pairing information of one main device, when the product is connected to a new device, the connection of historical devices is not supported after.
8. In this case, you need to delete the historical connection information of this peripheral can be successfully matched for new search.

10 FUNCTIONS OF EACH KEY

NO.	ICON	ANDROID OS	WINDOWS OS
1		Power Off	Power Off / Sleep
2		Backspace	Backspace
3		Mouse Lock	Mouse Lock
4		Menu	Menu

2.4G & BT5.5 DUAL MODE WIRELESS VOICE AIR MOUSE

NO.	ICON	ANDROID OS	WINDOWS OS
5	Navigation Keys	Up	Up
6		Down	Down
7		Left	Left
8		Right	Right
9	OK	Enter	Enter
10		Return Press and Hold 3 Seconds to home	Return Press and Hold 3 Seconds to home
11		Double click this key to Turn ON/OFF	Double click this key to Turn ON/OFF
12		Volume Down	Volume Down
13		Open the Google Voice Assistant	/
14		Volume Up	Volume Up
15		Previous	Previous
16		Play/Pause	Play/Pause
17		Next	Next

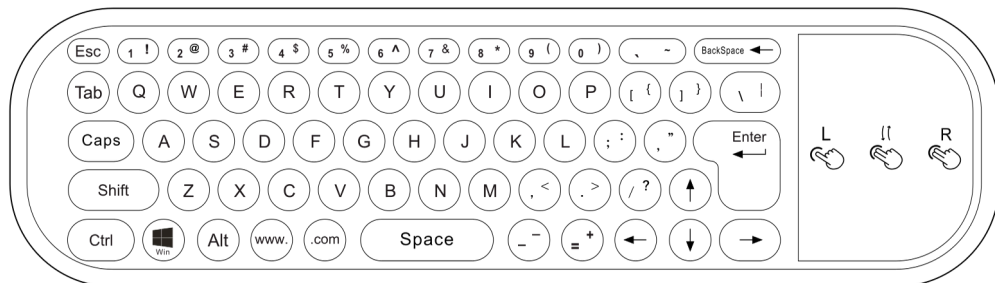 

11 BACKSIDE KEYBOARD

Press and hold "Fn" to complete text input on the upper right corner of keyboard.
Press and hold "Shift" to complete uppercase input.

12 TOUCH PANEL FUNCTION

One-finger: Left-click function

Two-finger: Right-click function

Two-finger drag: Slide up and down function

13 LED INDICATOR

The product has dual color LED indicator which turns red during charging and green when in usage.

14 GREEN LED INDICATION

1. When the connection between the product and connecting device is stable the color of an LED indicator turns off.
2. When the connection between the product and connecting device is lost LED indicator starts flashing rapidly at a frequency of 5Hz, in this case check for the presence of any metallic objects disturbing the signal or if the head of the receiver is well connected to the host.

15 RED INDICATION

1. When the product is being charged the LED indicator turns red and turns off when fully charged.
2. When the battery is low the LED indicator flashes red at a frequency of 2Hz, in this case charge the device. (When the battery is low the device automatically goes into sleeping mode every 20 seconds).

16 NOTE

1.AIR MOUSE FUNCTIONS:

Some multi-media device maybe is not available for air mouse, so if the key [OK] doesn't work during device working, please end close air mouse pointer and try again.

2.INFRARED TRANSMISSION PROGRAM:

6 keys of infrared program can be available for many popular television, voice devices and A/V receiver, but it is not suitable for all kinds of brands and items. As some remote control cannot be infrared programmed due to Bluetooth or wireless radio frequency technology. Or as the infrared remote control may use an unusual/unique infrared code number; in this case, we cannot program successfully.

3.BATTERY POWER:

Please make sure that the battery is sufficiently charged. When the battery is low, the brightness of the backlit and the stability of the air mouse cursor will be affected.


4.SPACE UNDER WORK:

The actual space of this device will be affected by the electronic magnetic field. Please make sure that there is no electromagnetic interference in the working space.

5.BT5.0 VOICE ONLY SUPPORTS GENUINE ANDROID SET TOP BOX:


BT5.0 voice only supports some devices with Genuine Android set top box voice function. Some models are not suitable for BT5.0 voice, which is a normal phenomenon! It's not about our products!

 (Configuration depending on market)

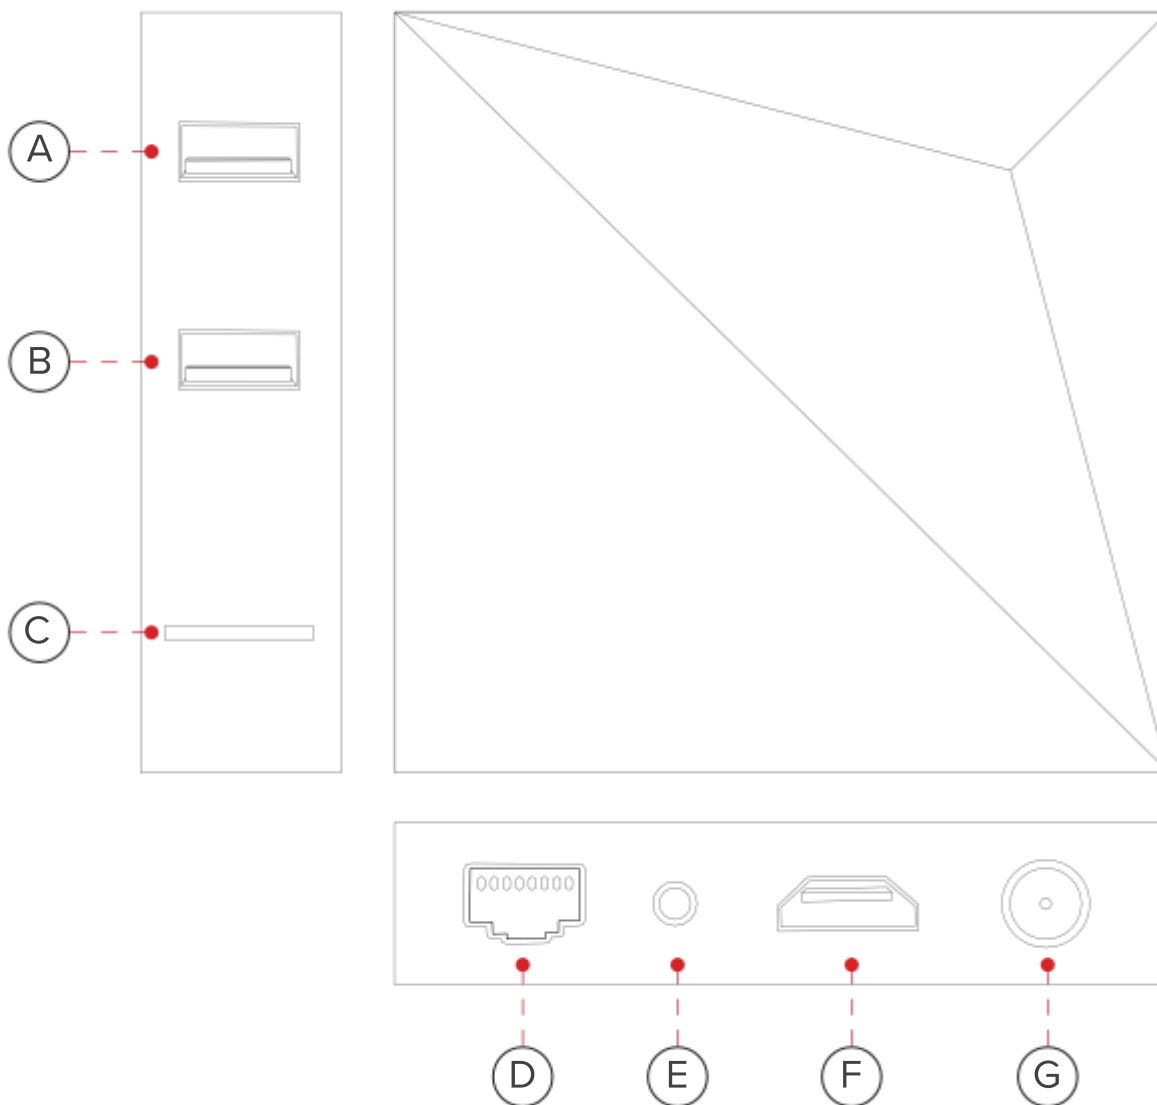


BUTTONS

- | | | | |
|---|---------------|---|----------------|
| A | USB Port | B | USB Port |
| C | Micro SD Card | D | Ethernet Cable |
| E | Audio Port | F | HDMI Port |
| G | Power Port | | |

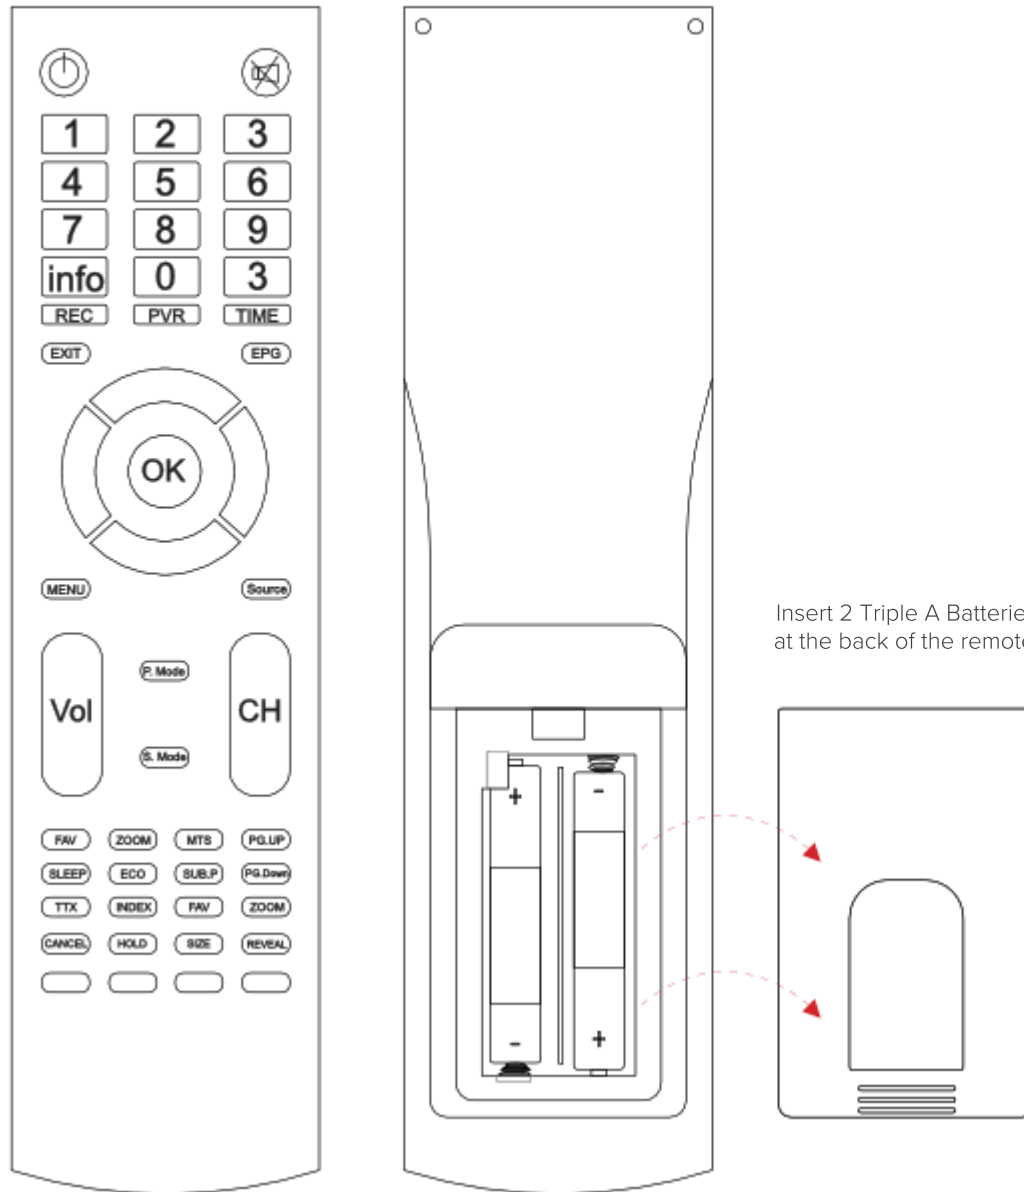 


WHAT CAN YOU DO WITH THIS REMOTE?

 - Change the brightness and color of the screen.
- Change the HDMI input
- Increase the audio volume of the T.V.
- several more advanced settings

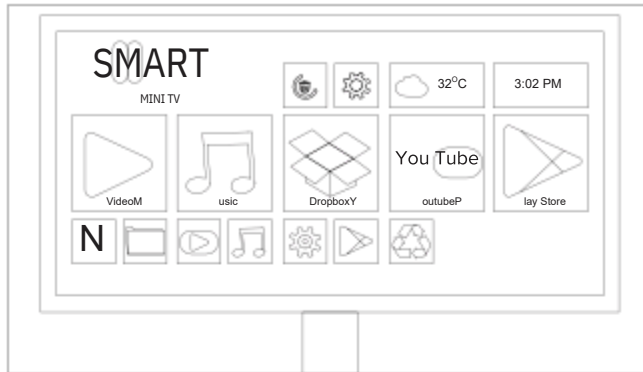


1 Turn on Cinema TV

 Either Press the power button on the right side of the T.V. or on the remote to turn the cosmos on.

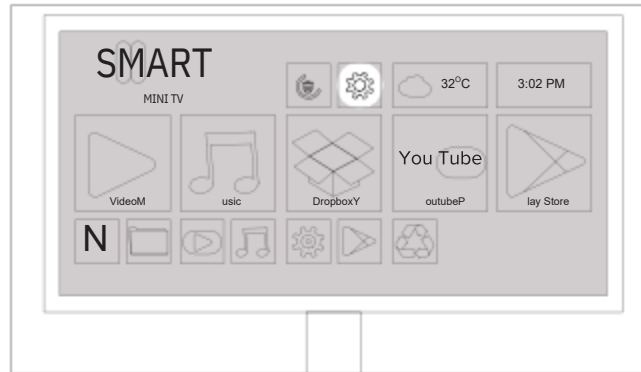


2 Connect to the internet

 Go to "Settings" and choose "network".

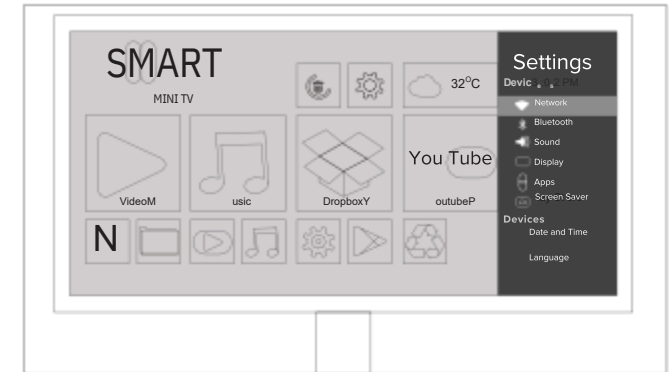


3 Connect to the internet

 Find your wi-fi name on the list of networks that would pop up and enter your password.

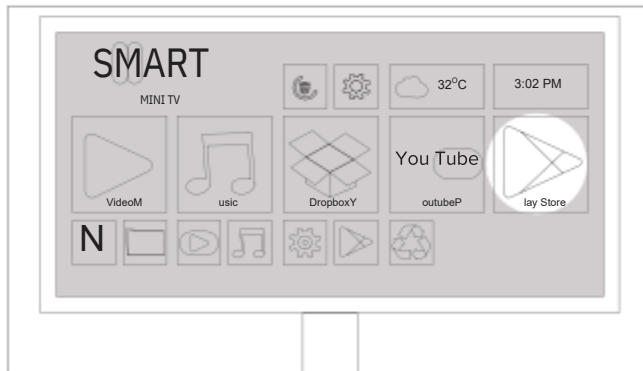

Option 1 Google Play Store


 
Find the desired app on the Google Play Store. Download and install it on your device.

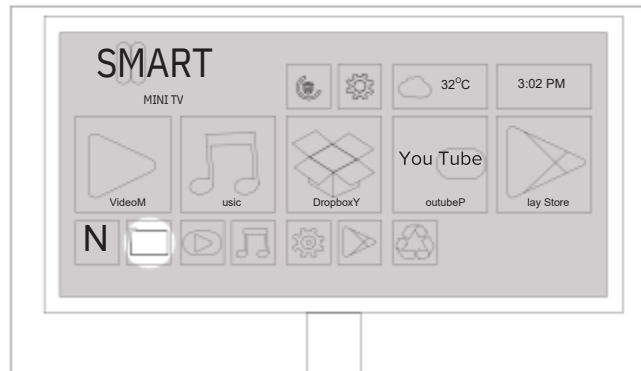

Option 2 Install APK

Download your APK online. Find it on the "File Manager" and double click it to install.

  ONLY APPLICABLE FOR THE BRUSHED STAINLESS STEEL

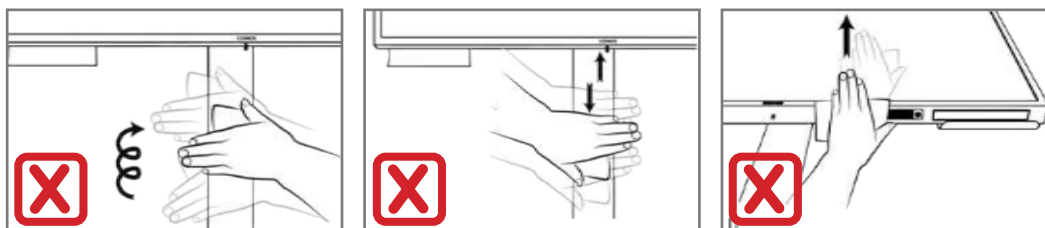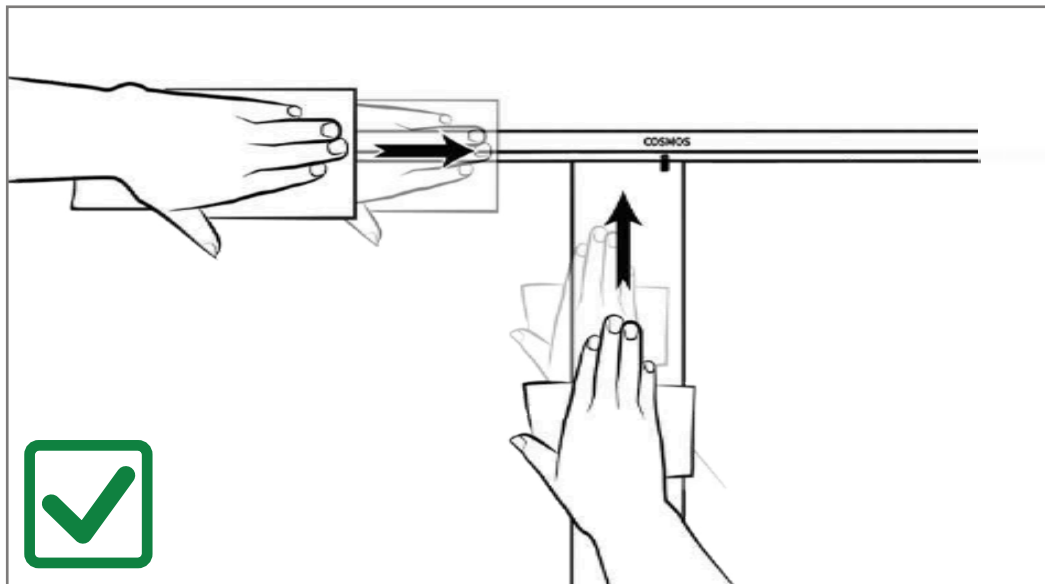

With this special buffer you make stainless steel look as new again in minutes.

Important Notes:

1. Please press firmly with buffer in one sweeping motion in the same direction as the structure and grain of the stainless steel.
2. DO NOT make circular movements.
3. DO NOT go against the grain and structure of the stainless steel.

Mit diesem speziellen Polierschwamm lassen Sie Edelstahl in nur wenigen Minuten wieder wie neu aussehen.

Wichtige Hinweise:

1. Drücken Sie den Polierschwamm fest an und führen Sie ihn in einer einzigen gleichmäßigen Bewegung in Richtung der Struktur und Maserung des Edelstahls.
2. Führen Sie KEINE kreisenden Bewegungen aus.
3. Arbeiten Sie NICHT entgegen der Maserung und Struktur des Edelstahls.

Avec ce tampon de polissage spécial, redonnez à l'acier inoxydable son aspect neuf en quelques minutes.

Remarques Importantes:

1. Appuyez fermement avec le tampon de polissage en effectuant un seul mouvement continu dans le sens de la structure et du grain de l'acier inoxydable.
2. N'effectuez PAS de mouvements circulaires.
3. Ne travaillez PAS à contre-sens du grain et de la structure de l'acier inoxydable.

Met deze speciale polijstpons laat u roestvrij staal (RVS) binnen enkele minuten weer als nieuw uitzien.

Belangrijke Opmerkingen:

1. Druk de polijstpons stevig aan en maak één vloeiende beweging in de richting van de structuur en de slijprichting van het RVS.
2. Maak GEEN cirkelvormige bewegingen.
3. Wrijf NIET tegen de slijprichting en structuur van het RVS in.

使用这款特殊的抛光海绵，只需几分钟即可让不锈钢焕然一新。

重要提示：

1. 请用抛光海绵沿着不锈钢的纹理和结构方向，用力按压并以一次连续、平稳的动作进行擦拭。
2. 请勿以打圈方式擦拭。
3. 请勿逆着不锈钢的纹理和结构方向擦拭。