

Remove the TV	Carefully detach the TV from the wall ◇ one person on each side.	
Remove screws	Remove 4 screws from TV case ◇ There are two screws on each side of the TV case.	
Take the TV out	Loosen the screw 3mm higher ◇ Do not need remove the screws completely. Hold the screw tightly and lift it upward.	